

Assembly of ALTAIR 3P / NEPTUNE 3P Handle on axle
(Left Hand Side handle version)

1: Raise the Backrest




- Backrest in sleeping position
 - Pull up the bar
 - Initiate The Rotation Forward
 - Release the bar
- Remove the nuts and washers

3: Approximate alignment of the triangular plates in position "B"



2: Assembly of the seat cushion

- Remove the cover and the protection-cardboard around articulation.
- Rotate the hinge plates of the seat.

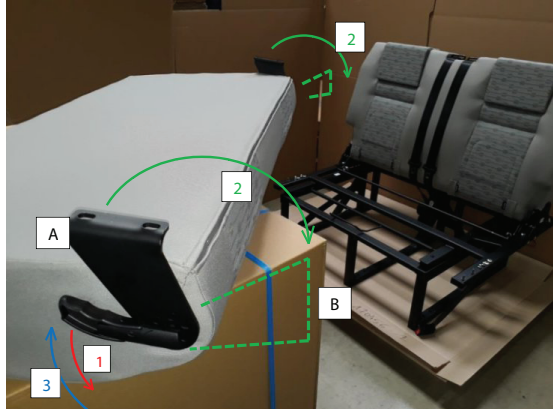

ATTENTION: NEVER FORCE THE MECHANISM!


- 1 – Press the release lever and hold it in position
- 2 – Rotate the triangular plate of the handle simultaneously with the opposite plate, up to position "B".
- 3 – Release the handle when the 2 triangular plates are well aligned in position "B"

4: WHAT TO DO IN CASE OF BLOCKED PLATE

- 1 – Press the release lever and hold it in position
- 2 – Bring back the hinge on handle side to the position "A"
- 3 – Rotate the triangular plate of the handle simultaneously with the opposite plate, up to position "B"

USE TWO PEOPLE IF NECESSARY

- 4 – Release the handle when the 2 triangular plates are well aligned in position "B"

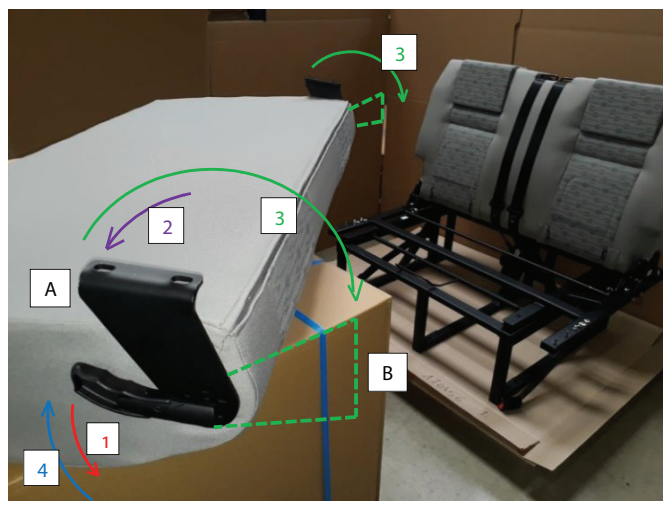

5: Screwing of the cushion


PAGE 1 - 2

- 1 – Screw the triangular plate on the opposite side of the handle (torque N.m 24 maximum)
- 2 – Press the release lever and hold it in position
- 3 – Lower the hinge onto the bolts of the frame
- 4 – Release the lever
- 5 – Screw the second hinge on handle side (24 N.m tightening torque maximum)



6: Rotation of the cushion

- 1 – Press the release lever and hold it in position
- 2 – Rotate the seat cushion to the required position
- 3 – Release the lever

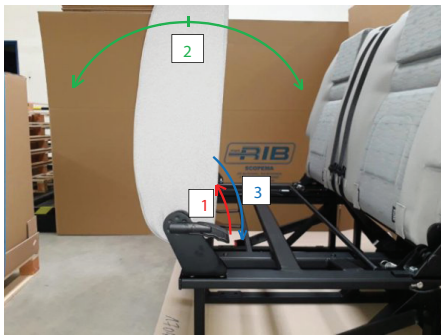

7: Assembly of the rear back (only for model ALTAIR 3 P)

Proceed in the same way for the Assembly of the rear backrest (rotation of the handle in the opposite direction of the seat cushion one)

Day / driving position :



8: Operating sleeping position

